

### STEPS TO

## CONNECT

1. Ensure cylinder valve is closed.
2. Attach tree to cylinder.
3. Ensure lantern valve is closed.
4. Attach lantern to top of tree.
5. Ensure stove valve is closed.
6. Attach hose to side of tree.
7. Attach hose to stove.
8. Check all connections are tight.
9. Open valve on cylinder.
10. Open valve on lantern and/or stove and light the flame.
11. Adjust flame as needed.

### STEPS TO

## CONNECT

1. Ensure cylinder valve is closed.
2. Attach tree to cylinder.
3. Ensure lantern valve is closed.
4. Attach lantern to top of tree.
5. Ensure stove valve is closed.
6. Attach hose to side of tree.
7. Attach hose to stove.
8. Check all connections are tight.
9. Open valve on cylinder.
10. Open valve on lantern and/or stove and light the flame.
11. Adjust flame as needed.

### STEPS TO

## CONNECT

1. Ensure cylinder valve is closed.
2. Attach tree to cylinder.
3. Ensure lantern valve is closed.
4. Attach lantern to top of tree.
5. Ensure stove valve is closed.
6. Attach hose to side of tree.
7. Attach hose to stove.
8. Check all connections are tight.
9. Open valve on cylinder.
10. Open valve on lantern and/or stove and light the flame.
11. Adjust flame as needed.

### STEPS TO

## CONNECT

1. Ensure cylinder valve is closed.
2. Attach tree to cylinder.
3. Ensure lantern valve is closed.
4. Attach lantern to top of tree.
5. Ensure stove valve is closed.
6. Attach hose to side of tree.
7. Attach hose to stove.
8. Check all connections are tight.
9. Open valve on cylinder.
10. Open valve on lantern and/or stove and light the flame.
11. Adjust flame as needed.

### STEPS TO

## CONNECT

1. Ensure cylinder valve is closed.
2. Attach tree to cylinder.
3. Ensure lantern valve is closed.
4. Attach lantern to top of tree.
5. Ensure stove valve is closed.
6. Attach hose to side of tree.
7. Attach hose to stove.
8. Check all connections are tight.
9. Open valve on cylinder.
10. Open valve on lantern and/or stove and light the flame.
11. Adjust flame as needed.

### STEPS TO

## DISCONNECT

1. Ensure stove valve is off.
2. Close valve on cylinder.
3. Allow lantern to burn until it goes out (up to 10 minutes).
4. If lantern is not being used, let stove burn until it goes out, consuming fuel in hose & tree.
5. Turn off lantern valve.
6. Remove lantern from tree.
7. Remove stove hose.
8. Remove tree from cylinder.

### STEPS TO

## DISCONNECT

1. Ensure stove valve is off.
2. Close valve on cylinder.
3. Allow lantern to burn until it goes out (up to 10 minutes).
4. If lantern is not being used, let stove burn until it goes out, consuming fuel in hose & tree.
5. Turn off lantern valve.
6. Remove lantern from tree.
7. Remove stove hose.
8. Remove tree from cylinder.

### STEPS TO

## DISCONNECT

1. Ensure stove valve is off.
2. Close valve on cylinder.
3. Allow lantern to burn until it goes out (up to 10 minutes).
4. If lantern is not being used, let stove burn until it goes out, consuming fuel in hose & tree.
5. Turn off lantern valve.
6. Remove lantern from tree.
7. Remove stove hose.
8. Remove tree from cylinder.

### STEPS TO

## DISCONNECT

1. Ensure stove valve is off.
2. Close valve on cylinder.
3. Allow lantern to burn until it goes out (up to 10 minutes).
4. If lantern is not being used, let stove burn until it goes out, consuming fuel in hose & tree.
5. Turn off lantern valve.
6. Remove lantern from tree.
7. Remove stove hose.
8. Remove tree from cylinder.

### STEPS TO

## DISCONNECT

1. Ensure stove valve is off.
2. Close valve on cylinder.
3. Allow lantern to burn until it goes out (up to 10 minutes).
4. If lantern is not being used, let stove burn until it goes out, consuming fuel in hose & tree.
5. Turn off lantern valve.
6. Remove lantern from tree.
7. Remove stove hose.
8. Remove tree from cylinder.